ServiceLINK[®] QuiQ[™] Charger Reprogramming Instructions



• Disconnect QuiQ charger from AC power supply and from batteries.



2. Connect QuiQ USB interface module to battery charger and Service-LINK USB port as shown below. NOTE: Be sure to use the USB port identified below. The other USB ports are disabled.



3. Reconnect AC power supply.



4. *Launch the QuiQ Programmer software* from the start menu.



5. *Click on OK* to confirm charger connectivity.



6. Select and delete the unused algorithm "AlgId8-v0.01" from the "Algorithms Present" field (see below). The charger holds a maximum of 10 algorithms, so one must be deleted to add a new program.

NOTE: Certain battery chargers may not have "Algld8-v0.01." Delete existing algorithm "Algld26-v..." instead.



7. Select and add to charger the new algorithm "Algld28-v1_00.enc" from the "Battery Charge Algorithms" field (see below).

QuiQ Programmer - v3.0.1.0				
Folder: C:\Program Files\Delta-Q\QuiQ	ammer			Browse
Computer Charger Software Versions:	- Char Statu	iger is:	0 	
	Add to Firm Charger Soft Algo	ial Number: mare: ware: prithm:	DQCR361014001926 1.07 1.26.0 7	
Battery Charge Algorithms: Algld28-v1 00.enc	Algor Algor	ithms Presen d1-v0.01	E .	
	Algio Algio Algio Algio Algio Algio Algio	d3-v1.00 d5-v0.01 d6-v0.03 d7-v1.00 d11-v1.32		
	Default Algi	127-y0.01		

8. Select and set as default the new algorithm "AlgId28-v1_00.enc" from the "Algorithms Present" field (see below).

🗟 QuiQ Programmer - v3.0.1.0			
Folder: C:\Program Files\Delta-Q\QuiQ Progra	ammer	ua- la	Browse
Computer Charger Software Versions:	1	Charger Status:	
	Add to Charger	Serial Number: DQCR361014001926 Firmware: 1.07 Software: 1.26.0 Algorithm: 7	
Battery Charge Algorithms:		Algorithms Present	
Algld28-v1_UU.enc	Set As Default	Algld1-v0.01 Algld3-v1.00 Algld5-v0.01 Algld6-v0.03 Algld7-v1.00 Algld28-v1.00 Algld11-v1.32 Algld27-v0.01	
	×		

9. Verify the new algorithm #28 in the "Status" field.

Serial Number:	DQCR361014001926
Firmware:	1.07
Software:	1.26
Algorithm:	28

10. *Done*. Disconnect QuiQ USB interface cable from ServiceLINK device and from QuiQ battery charger.

