



INSTRUCTION BULLETIN

No. 340843
Machine: M20, T20, T7,
T5, T3, SSR
Published: 01-2007
Rev. 00

NOTE: DO NOT DISCARD the Parts List from the Instruction Bulletin. Place the Parts List in the appropriate place in the machine manual for future reference. Retaining the Parts List will make it easier to reorder individual parts and will save the cost of ordering an entire kit.

NOTE: Numbers in parenthesis () are reference numbers for parts listed in Bill of Materials.

Installation instructions for **kit number 9003292**

SYNOPSIS:

This kit contains the parts needed to install a conduit onto the FaST-PAK carton hose. Please follow step-by-step instructions.

SPECIAL TOOLS / CONSIDERATIONS:

(Estimated time to complete: 15 minutes)

Do Not Discard the conduit (1) with the old FaST-PAK carton when changing the carton. The conduit must be removed from the old FaST-PAK carton and installed onto the new FaST-PAK carton before the new carton is installed onto the machine.

This conduit (1) does not need to be installed onto FaST-PAK cartons equipped with factory installed conduit. Disregard this IB if carton is equipped with factory installed conduit.

PREPARATION:

1. Park the machine on a clean level surface, turn off the machine, set the parking brake, and remove the key.

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, set parking brake, and remove key.

INSTALLATION:

1. If installing the conduit (1) onto a FaST-PAK carton already installed on a machine, remove the carton from the machine. Refer to Operators Manual for instructions how to remove the FaST-PAK carton from the machine.

If installing the conduit (1) onto a new FaST-PAK carton that has not been installed onto a machine, prepare the carton to be installed onto the machine. Refer to the instructions on the FaST-PAK carton.

NOTE: Conduit (1) does not need to be installed onto FaST-PAK cartons equipped with factory installed conduit. Disregard this IB if carton is equipped with factory installed conduit.

2. Extend the hose from the FaST-PAK carton, hold the conduit (1) up to the carton hose, and cut the conduit to the length of the hose. Be sure to add approximately a 1/2" to the conduit for the portion of the hose inside the collar. Refer to Fig. 1 and Fig. 2.

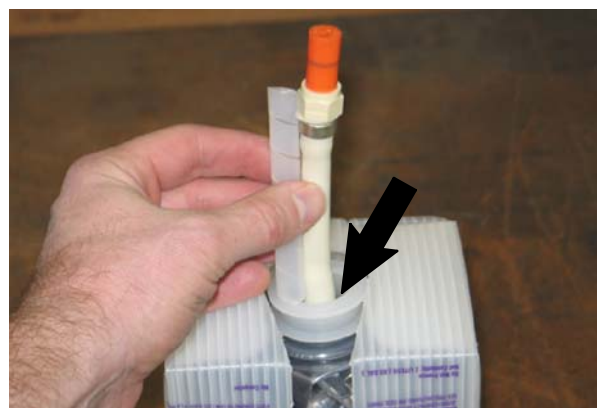


FIG. 1

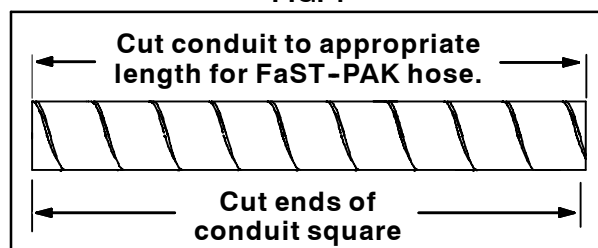


FIG. 2

3. Wrap the conduit (1) around the hose from where the hose is attached to the FaST-PAK carton fitting inside the collar to the metal ring holding the hose onto the coupling. A small portion of the conduit should wrap around the metal ring. Refer to Fig. 3 and Fig. 4.

NOTE: If installing the conduit (1) onto a FaST-PAK carton removed from a machine, be sure to straighten any kinks from the hose before installing the conduit.

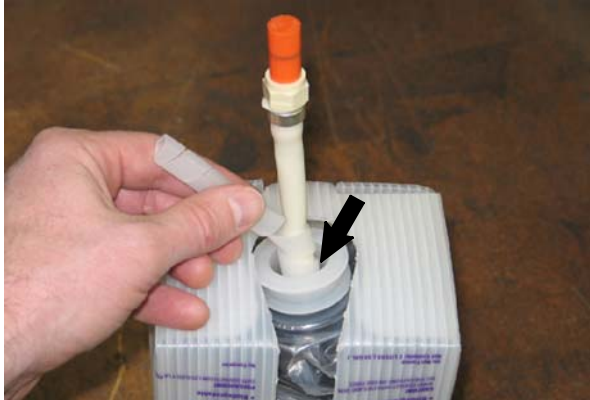


FIG. 3

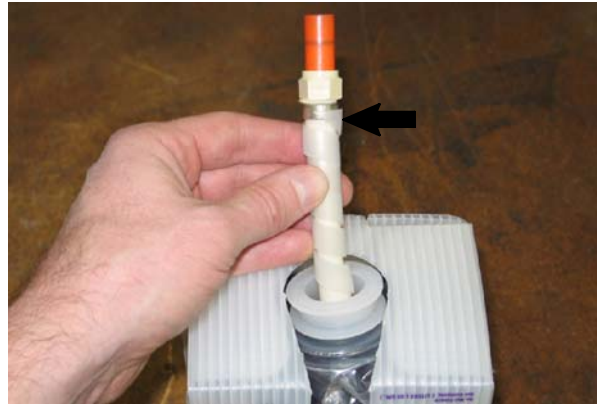


FIG. 4

4. Install the FaST-PAK carton onto the machine. Refer to the Operators Manual for installation instructions.

Do Not Discard the conduit (1) with the old FaST-PAK carton when changing cartons. The conduit must be removed from the old FaST-PAK carton and installed onto the new FaST-PAK carton before the new carton is installed onto the machine.

This conduit (1) does not need to be installed onto FaST-PAK cartons equipped with factory installed conduit. Disregard this IB if carton is equipped with factory installed conduit.

Bill of Materials for Conduit Kit, FaST PAK-9003292

	Ref.	Tennant Part No.	Description	Qty.
▽		9003292	Conduit Kit, FaST PAK	1
▲	1	1036100	Conduit, Spiral Wrap	1

TENNANT COMPANY
P. O. Box 1452
Minneapolis, MN 55440-1452