

INSTRUCTION BULLETIN

No. 9008212

Machine: S30/S30 X4/

S30 XP

Published: 09-2010

Rev. 00

NOTE: DO NOT DISCARD the Parts List from the Instruction Bulletin. Place the Parts List in the appropriate place in the machine manual for future reference. Retaining the Parts List will make it easier to reorder individual parts and will save the cost of ordering an entire kit.

NOTE: Numbers in parenthesis () are reference numbers for parts listed in Bill of Materials.

Installation instructions for kit number 9008195

SYNOPSIS:

This kit contains the parts needed to install a corner bumper kit on S30/S30 XP/S30 X4 machines (serial numbers 002100 and above).

Please follow step-by-step instructions.

SPECIAL TOOLS / CONSIDERATIONS: NONE

(Estimated time to complete: 1/2 hour)

PREPARATION:

1. Park the machine on a clean level surface, turn off the machine, remove the key, and set the parking brake.

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, and remove key.

INSTALLATION:

1. Install a 10" cable (6) onto each hitch pin (4). Refer to Fig. 1.

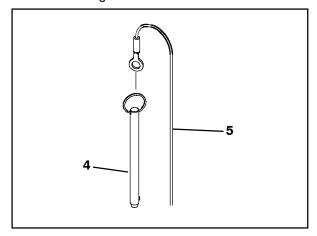


FIG. 1

2. Use two hex screws (6) to install each bumper bracket (3) and 10" cable (5) onto the frame of the machine. Refer to Fig. 3.

- 3. Use two hex screws (6) to install the left pumper tower (1) onto the frame of the machine. Refer to Fig. 3.
- 4. Use two hex screws (6) to install the right bumper tower (2) onto the frame of the machine. Refer to Fig. 3.
- 5. Close the bumper towers (1) and (2). Use the hitch pins (4) to secure the bumper towers to the bumper brackets (3). Refer to Fig. 2.



FIG. 2

6. Remove the hitch pins (4) and open the tower bumpers (1) and (2) to disengage the bumpers. Refer to Fig. 2.

NOTE: The tower bumpers (1) and (2) must be disengaged and opened before the rear engine compartment shrouds can be opened.

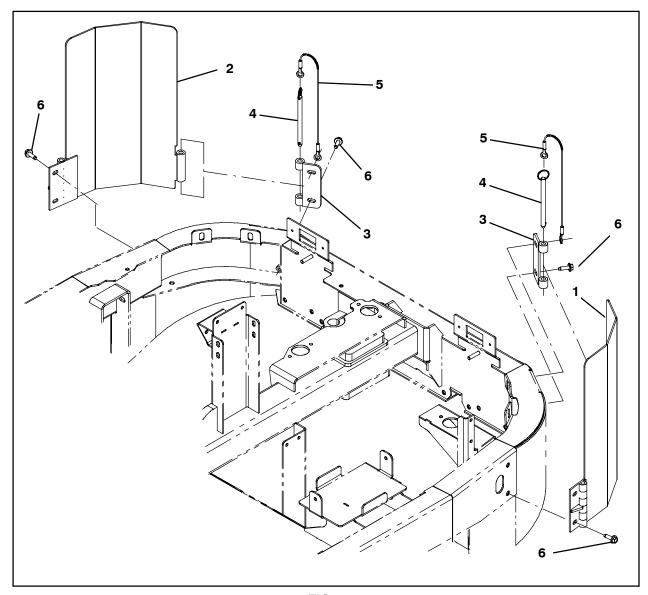


FIG. 3

Bill of Materials for Bumper Kit, Corner, CI [S30] - 9008195

| | | Tennant | | |
|-------------|------|----------|---|------|
| | Ref. | Part No. | Description | Qty. |
| \triangle | | 9008195 | Bumper Kit, Corner, CA [S30] | 1 |
| A | 1 | 1060546 | Angle Wldt, Bmpr, Tower, LH | 1 |
| A | 2 | 1061162 | Angle Wldt, Bmpr, Tower, RH | 1 |
| A | 3 | 1061629 | Bracket Wldt, Mtg, Bmpr | 2 |
| A | 4 | 1043176 | Pin, Hitch, .50D X 6.00L, PI | 2 |
| | 5 | 87172 | Cable, Glv, .13D 010.0L .52 Eye / .52 Eye | 2 |
| A | 6 | 1037358 | Screw, Hex, M10 X 1.50 X 35, 9.8, Sems | 8 |

TENNANT COMPANY P. O. Box 1452 Minneapolis, MN 55440-1452