



INSTRUCTION BULLETIN

No. 9012972
Machine: T17 / M17
Published: 05-2016
Rev. 01

NOTE: DO NOT DISCARD the Parts List from the Instruction Bulletin. Place the Parts List in the appropriate place in the machine manual for future reference. Retaining the Parts List will make it easier to reorder individual parts and will save the cost of ordering an entire kit.

NOTE: Numbers in parenthesis () are reference numbers for parts listed in Bill of Materials.


Installation instructions for **kit number 9020103**

SYNOPSIS:

This kit contains the parts needed to install a deluxe seat kit onto T17 scrubbers / M17 sweeper- scrubbers.
Please follow step-by-step instructions.

SPECIAL TOOLS / CONSIDERATIONS: NONE

(Estimated time to complete: 1 hour)



PROTECT THE ENVIRONMENT

Please dispose of packaging materials, used machine components such as batteries and fluids in an environmentally safe way according to local waste disposal regulations.


Always remember to recycle.

PREPARATION:

1. Park the machine on a clean level surface, turn off the machine, set the parking brake, and remove the key.

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, and remove key.

2. Disconnect the battery cable from the machine.

 **WARNING: Always disconnect battery cables from machine before working on electrical components.**

3. Remove the battery from the machine.

FOR SAFETY: When servicing machine, use a non-conductive battery removal device, use a hoist and adequate assistance when lifting batteries, follow site safety guidelines concerning battery removal, and battery installation must be done by trained personnel.

INSTALLATION:

1. Disconnect the main wire harness from the seat switch.
2. Remove the upper platform from the machine. Set all mounting hardware aside. (Fig. 1)
3. Remove the existing seat from the machine. Discard the seat, both slide tracks, and all mounting hardware. (Fig. 1)

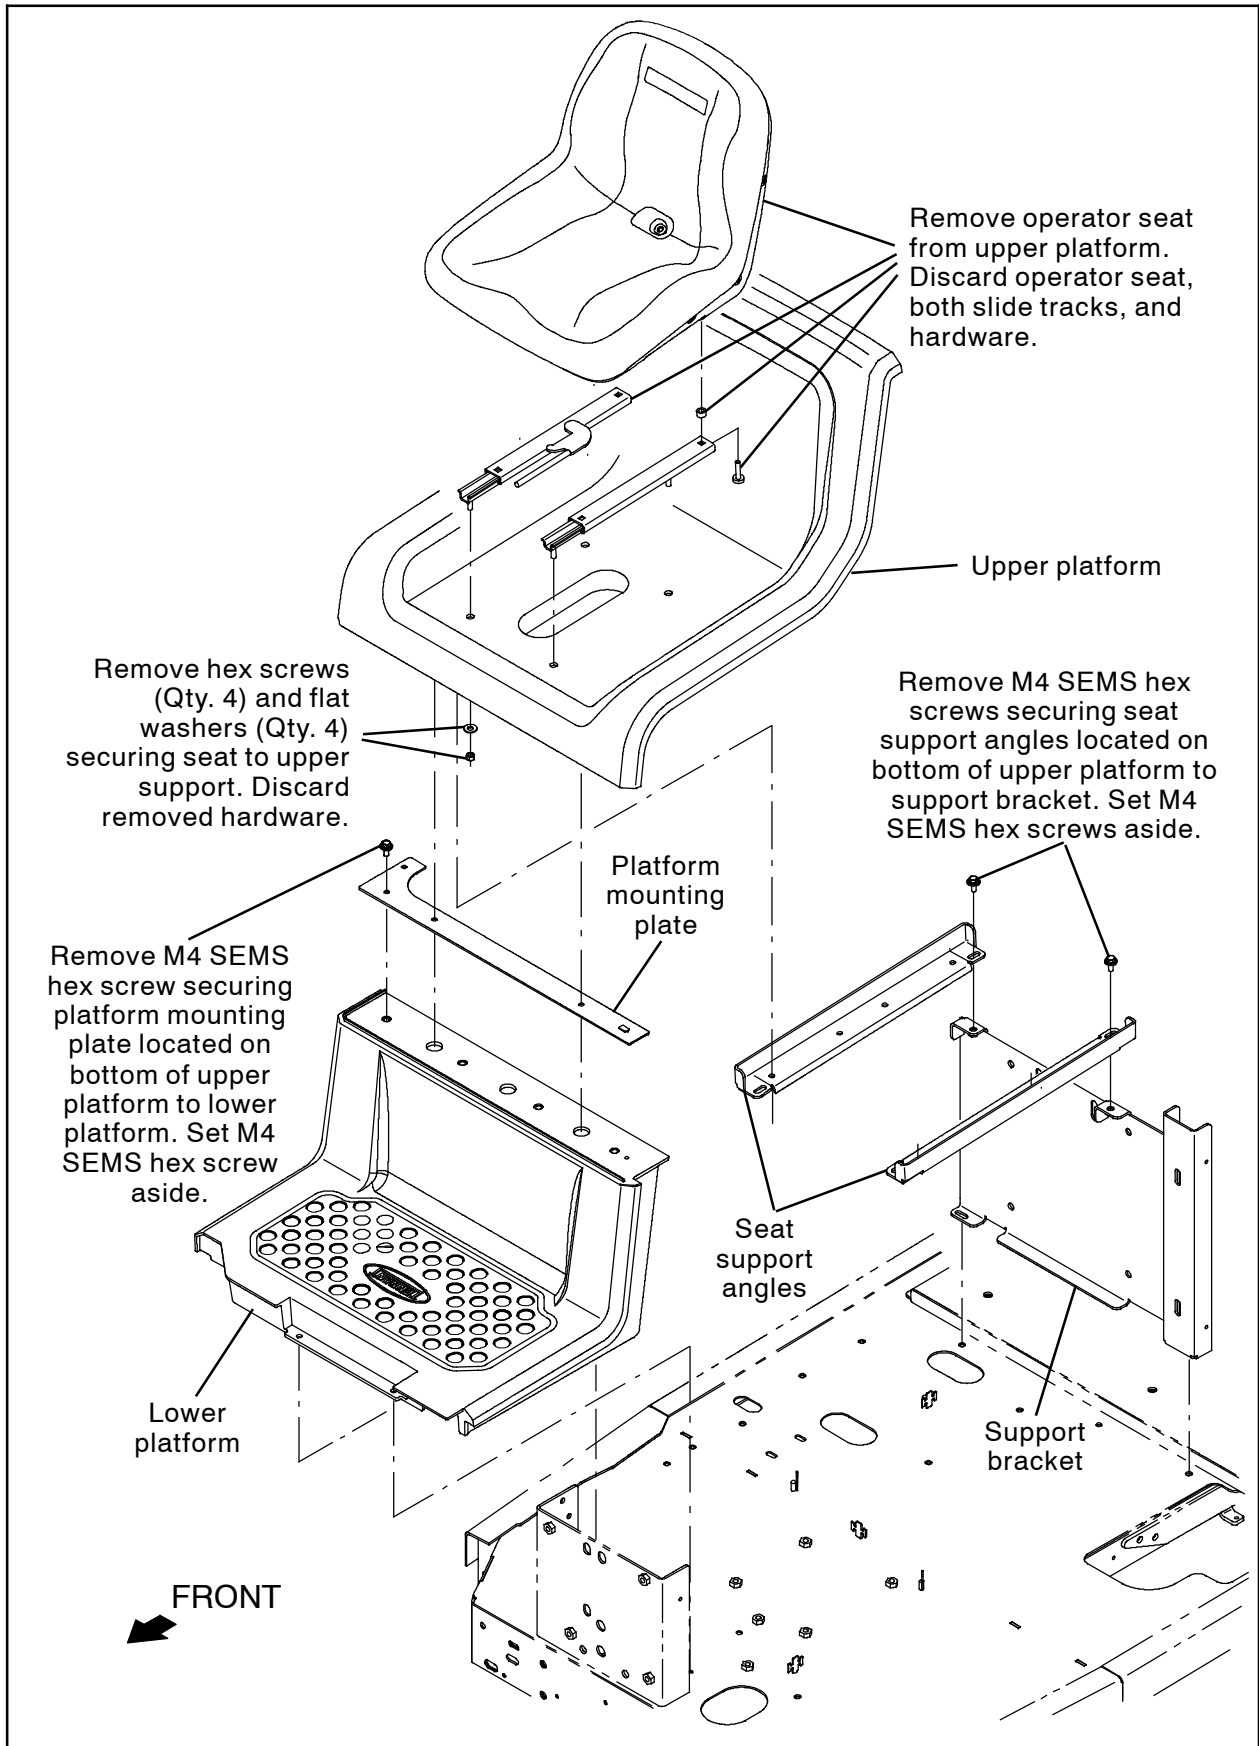


FIG. 1

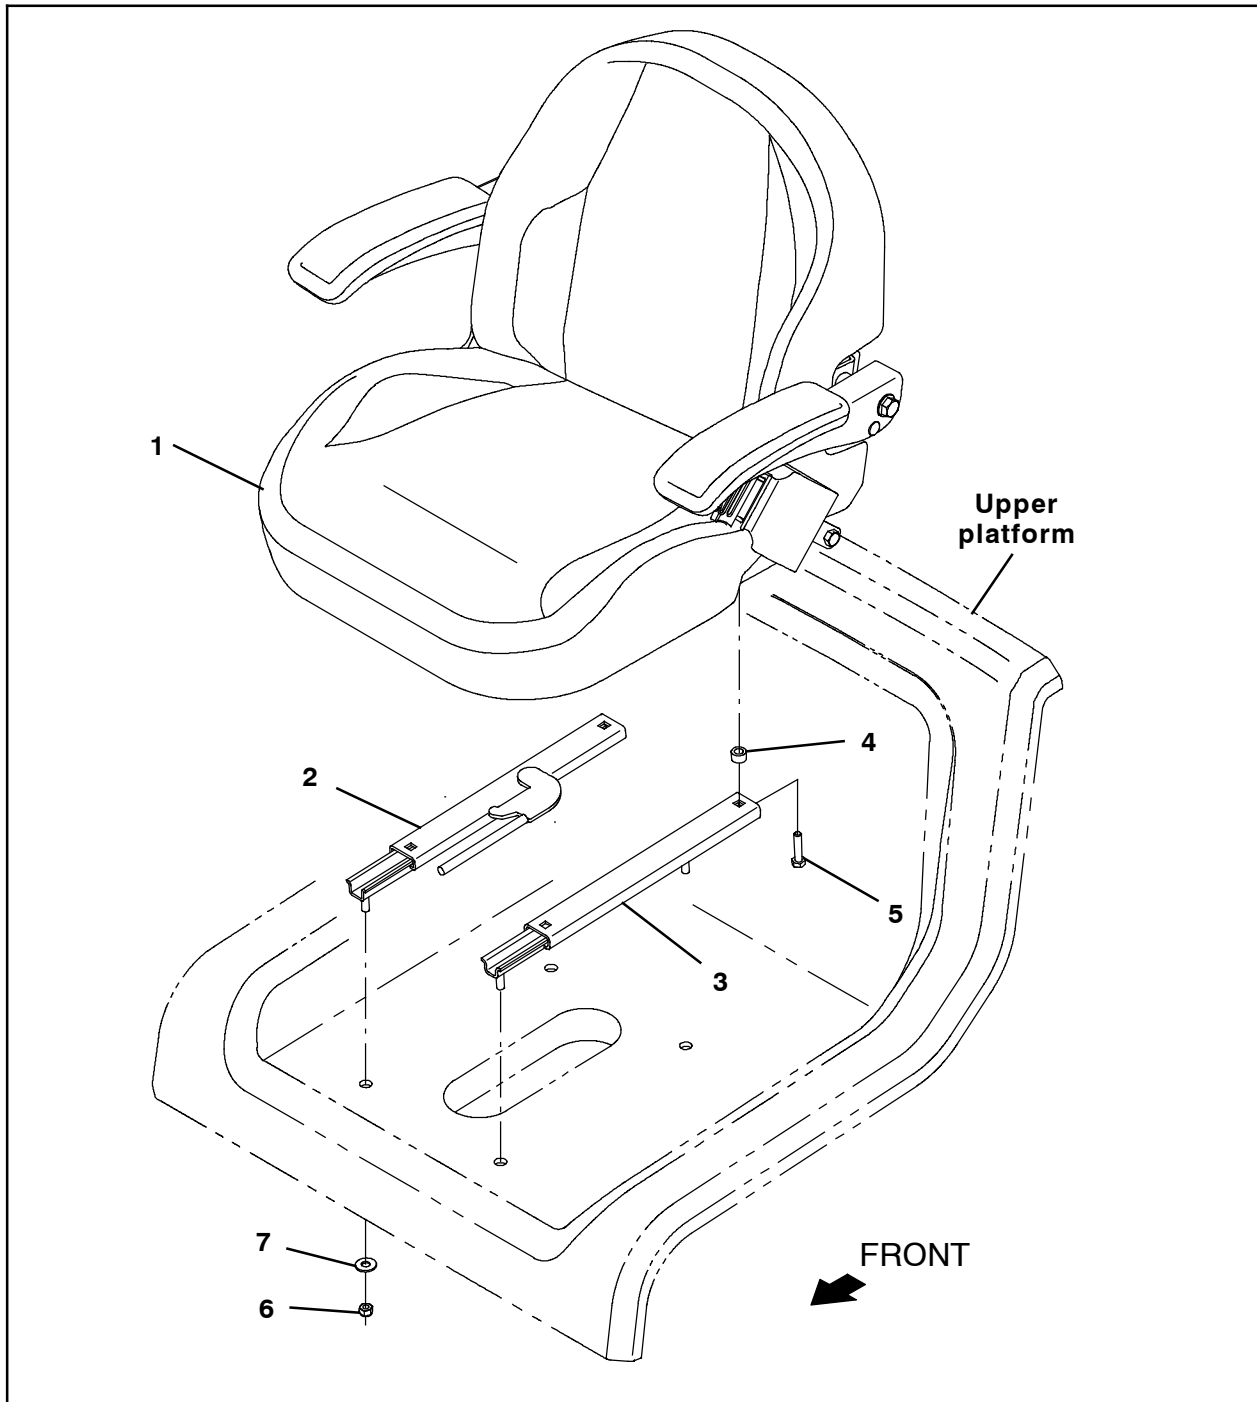


FIG. 2

4. Use two pan screws (5) and two spacers (4) to install the seat slide track with the latch (2) and the seat slide track (3) onto the deluxe operator seat (1). (Fig. 2)
5. Use four hex nuts (6) and four flat washers (7) to install the deluxe operator seat assembly assembled in the previous step onto the upper platform. (Fig. 2)
6. Reinstall the upper platform onto the machine.
7. Connect the main wire harness to the seat switch located on the bottom of the operator seat.

8. Reinstall the battery into the battery compartment.

FOR SAFETY: When servicing machine, use a non-conductive battery removal device, use a hoist and adequate assistance when lifting batteries, follow site safety guidelines concerning battery removal, and battery installation must be done by trained personnel.

10. Test the machine. Place the directional switch in either forward or reverse. With no pressure on the operator seat, turn on the machine and press the propel pedal. The machine should not move. Sit in the operator seat and again press the propel pedal. The machine should move in the direction in which the directional switch is set.

9. Reconnect the battery cable to the machine.

Bill Of Materials For Seat Kit, Deluxe, CI [T17] - 9020103

	Ref.	Tennant Part No.	Description	Qty.
▽		9020103	Seat Kit, Deluxe, CI [T17]	1
▲	1	1201428	Seat, Dlx, W/ Armrests & Seatbelt	1
▲	2	360370	Track, Slide, Seat Adj, 12.5l, w/Latch	1
▲	3	360369	Track, Slide, Seat Adj, 12.5l	1
▲	4	1051052	Spacer, Rnd, .38b .88d .38l	4
▲	5	49177	Screw, Pan, Phl, .31- 18X1.00, G2	4
▲	6	41437	Nut, Hex, Lock, .31- 18, NI, SS	4
▲	7	01685	Washer, Flat, 0.38b 0.88d .08, SS	4

TENNANT COMPANY
P. O. Box 1452
Minneapolis, MN 55440-1452